

Following extensive testing and software development, we are the only stair manufacturer able to pre-drill optimised stair string fixing points specifically relating to the flight supplied.



Masonry

Insert screws in the holes provided. The screws should be min 5mm diameter (10 gauge) and penetrate min 50mm into the blockwork using appropriate wall plugs



Timber Frame

When fixing to timber stud walls, disregard the fixing locations indicated by our pre-drilled holes and fix to the nearest stud position instead, using 2 screws per stud aligned vertically min 50mm apart where studs are at 600c/c, or 1 screw per stud for studs at 400c/c. The screws should be min 5mm diameter (10 gauge) and penetrate min 50mm into the stud.

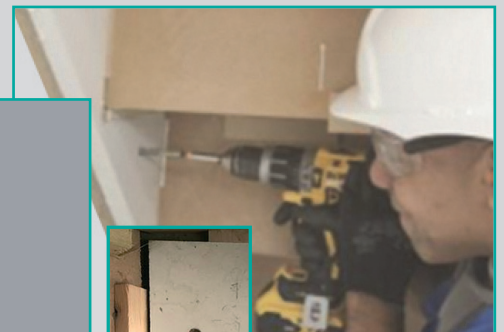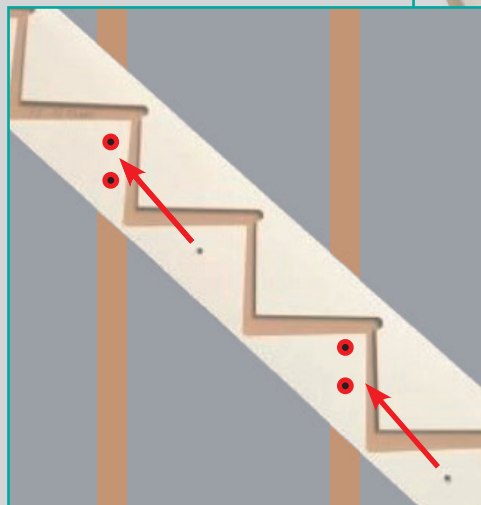

If you require further guidance email technical@staircraftgroup.com
Or visit www.staircraftgroup.com